



SUNGLAZE®

Solid Polycarbonate Standing Seam Architectural System

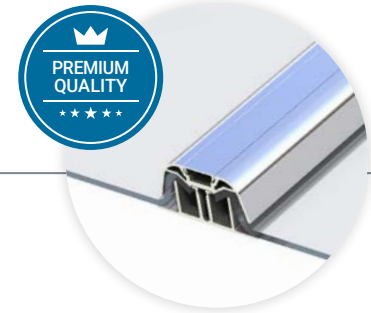

INSTALLATION GUIDE

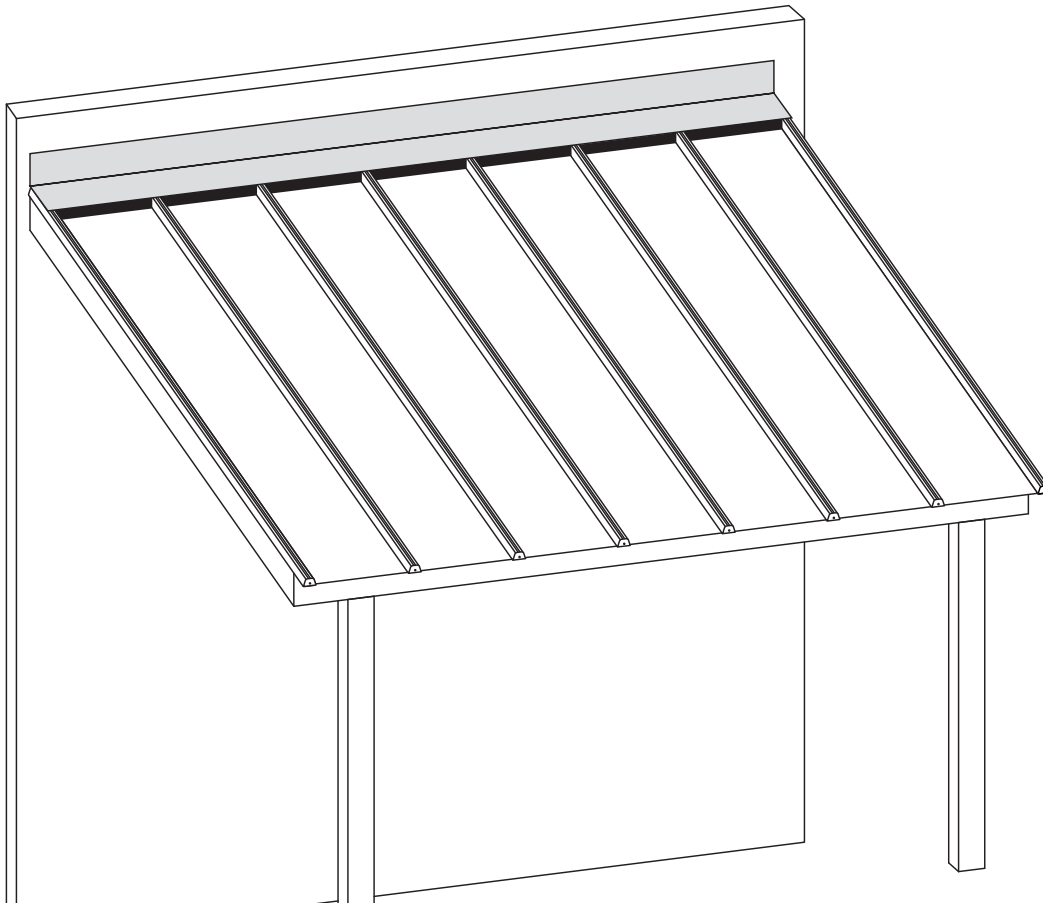

UV Protection



Durable
Against Impact



Wind Resistant



Clean & Elegant



Easy to nstall

Product Page



 
 
 
 
 
 
 
 
 
 
 
 
Installation Video





PALRAM Website



SYSTEM COMPONENTS

SUNGLAZE Panel		Inner & Side Profile Cap Cover		Fixing Screw - self-drilling screw 4.8x19mm (#10x3/4") for metal sub-structure	
Inner Profile Base		Inner Profile Closure		Fixing Screw - self-tapping screw 4.8x25mm (#10x1") for wood sub-structure	
Side Profile Base		Side Profile Closure		Locking Screw 5.5x19mm (#12x1")	
Inner Profile Cap		End Panel Gasket			
Side Profile Cap		Head Wall Metal Flashing *Not supplied by Palram			

  REQUIRED TOOLS


Drill		Circular Saw		Angle Grinder	
Impact Driver				Measuring tape	
Rubber Mallet		Ladder			
				Cyclonic installation available please contact a Palram representative.	

SAFETY COMES FIRST



Do not step directly on the sheets between the purlins!


When installing SUNGLAZE or doing maintenance work, always consider the sheet to be unfit to support a person's weight. Always use stepping ladders or crawling boards, supported by minimum three roof structural elements, when working on a glazed roof of any kind.

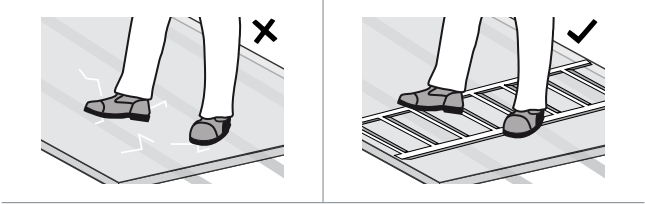

BEFORE INSTALLATION


Ensure that the underlying roof structure is square before starting installation of the SUNGLAZE Roof Covering System.

1 - Measure Rafter Spacing

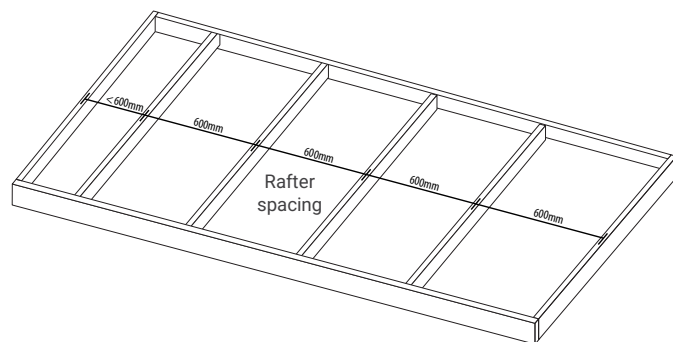


- To install SUNGLAZE directly on rafters, the inner rafters must be 600/800mm on center.
- If end rafters are less than 600/800mm on center, then the end Roof Panels must be cut to proper width before installation. SEE PAGE 8.

2 - Measure Purlin Spacing

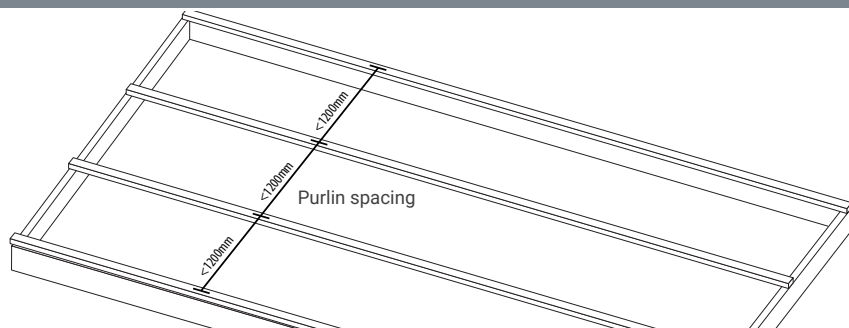


- To install SUNGLAZE directly on purlins, the purlins must be the same distance apart from each other.
- The maximum distance between purlins for SUNGLAZE is 1200mm on centers.
- For snow and uplift loads up to 150 kg/sqm.

3 - Ensure Minimum Roof Pitch

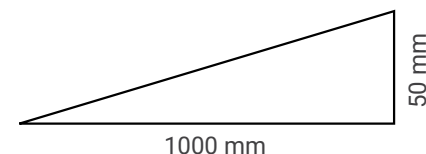

- Confirm that the roof pitch is at least 3 degrees (~50mm rise for 1m length).
- This minimum pitch will ensure proper water runoff and help keep the Roof Panels clean.

4 | Make a spacer bar

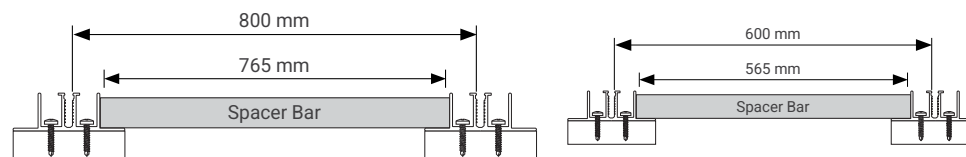


- Create a spacer bar as a jig to easily measure the distance between aluminum profiles during installation. Use a dowel, a 25x50mm, or similar.
- The spacer bar should be 565mm long.
- Make sure the edges are perfectly square cut.
- SEE PAGE 6 for spacer bar use.

BEFORE INSTALLATION

5 - Measuring & Cutting Aluminum Profiles


Measure and cut all aluminum Profile Bases, Profile Caps and Profile Cap Covers to correct length if required. The profiles should be at least 1cm longer than the panels.

Note: The aluminum profiles are already in the required length to suit the supplied sheets length.

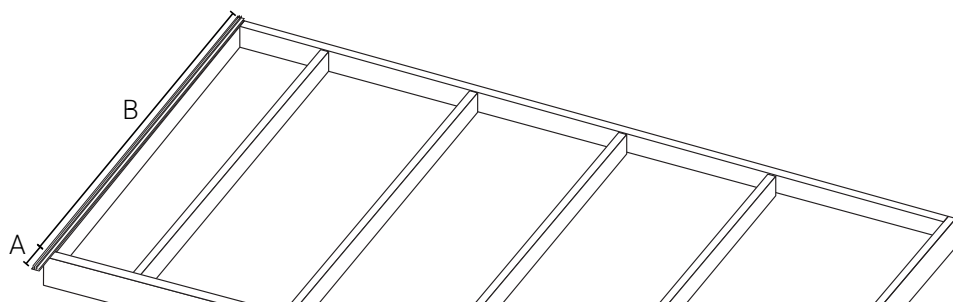


Here's how to measure the proper Profile length:

- **ADD** – Roof overhang (50mm minimum to 100mm maximum) (A)
- **PLUS** – Length of roof run (B)
- **EQUALS** – Total length of each Profile Base, Profile Cap and Profile Cap Cover.

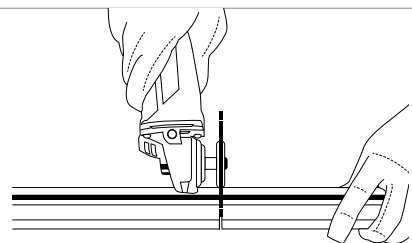

Measure twice, cut once!

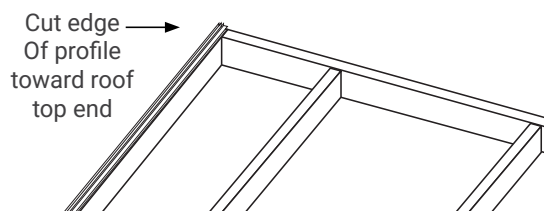

Always orient the cut edge of each aluminum profile toward the top of the roof.


Use an angle grinder to cut each profile component to the exact length required.

- Make sure your cuts are straight (exactly perpendicular to the profile).
- Wear gloves when cutting.
- Smooth rough edges with a metal file as needed.


Before drilling holes, place the Inner & Side Profile Base over a strip of wood. This will protect the end of the drill bit as it penetrates the Inner & Side Profile Base.

6 - Drilling Holes in the Profiles

Note: If your rafters or purlins are made of metal skip to step 7

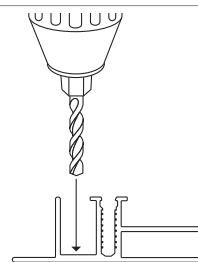


Inner Profile Base

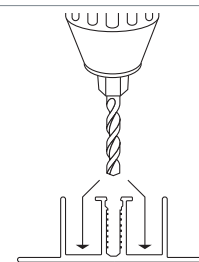


Side Profile Base

- Measure, mark and pre-drill 6mm screw holes in each Side Profile Base and Inner Profile Base.
- Follow the hole spacing guidelines below for rafter or purlin installation to match your roof support structure.
- Make sure all holes are centered along the notch in the middle of each Profile channel.

Rafter Installation

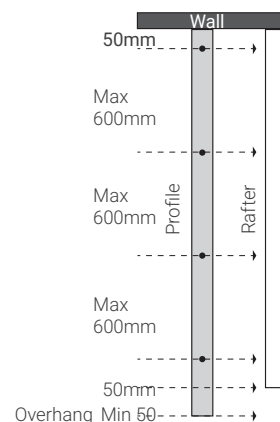


Purlin Installation

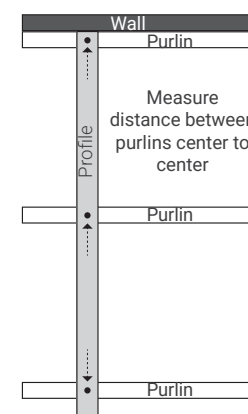


BEFORE INSTALLATION

7 - Fastening Profile Closures.

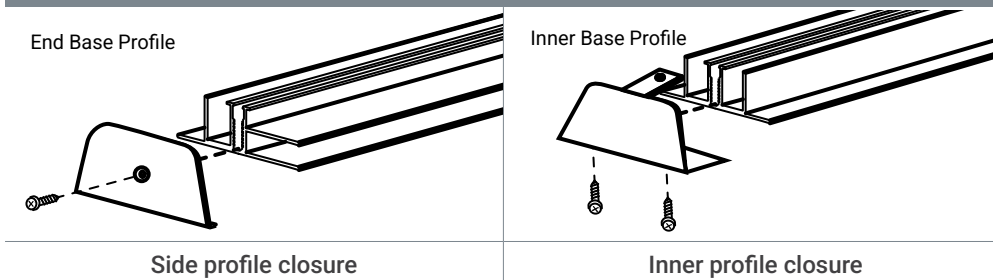

- Fasten a Profile Closure to the TOP and BOTTOM end of every Side Profile Base and Inner Profile Base.
- The Profile Closure will prevent the Roof Panel from sliding off when the Roof Panel is being installed.

8 - Fastening Profile Closures.

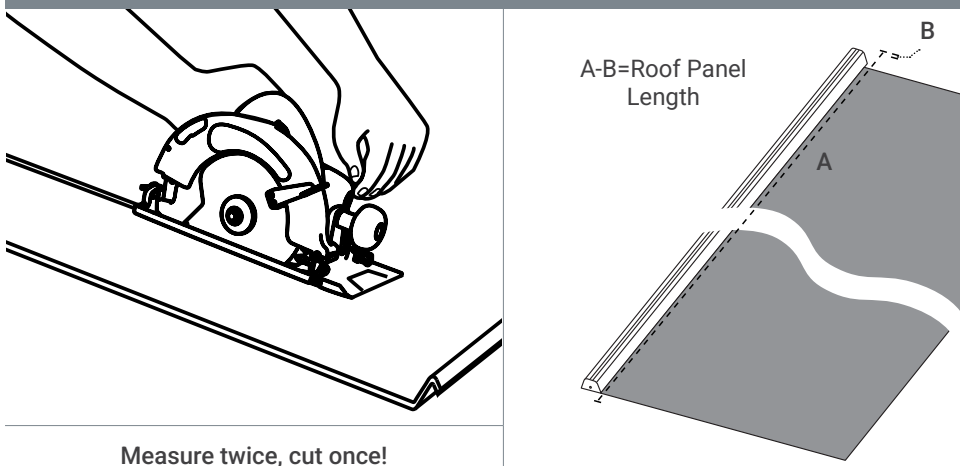


- Out of the box, the Roof Panels and Profile parts are already cut to the proper size to fit together.
- If cutting Roof Panels is required, here's how to measure the proper Roof Panel length:

- A** – Length of aluminum Profile
- B** – MINUS 3mm for every 1.0m of aluminum Profile
- EQUALS** – Total length of each Roof Panel
- For example, if your aluminum Profile is 4 meters long, then your Roof Panel will be 3.988m long.

Roof Panels must be cut shorter than Profiles to allow for panel expansion during hot weather. See the proper calculations above.

9 - Remove the protective film from the bottom of the Panel before installation.

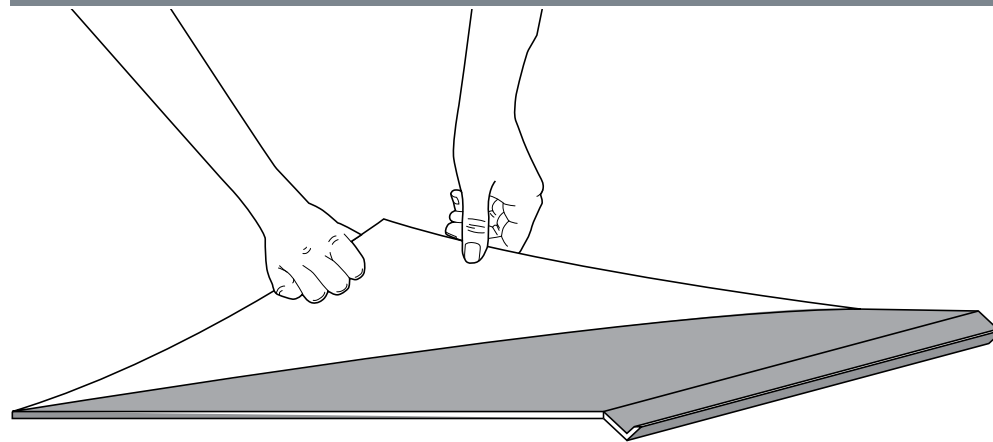


INSTALLATION

9 - Remove the protective film from the bottom of the Panel before installation.


Bottom side only!

DO NOT INSTALL MORE THAN TWO INNER PROFILE BASES AT A TIME. Otherwise, you risk accumulated measurement deviations across the roof.


1 - Fasten two Inner Profile Bases at or near the center of the roof.

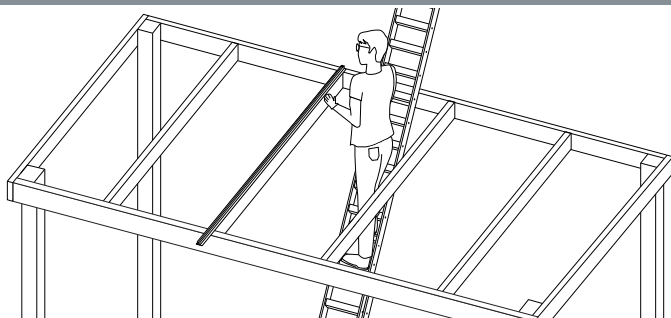


Fasten first inner profile base

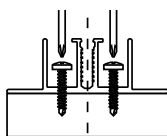

 Note: Profile closure not shown in drawing




- Stand between rafters and start at top of roofline.
- Center the profile in the middle of the rafter.
- Fasten screws in pre-drilled holes along the length of the first Inner Profile Base.
- Using the spacer bar at every hole, fasten screws through the pre-drilled holes along the second Inner Profile Base.

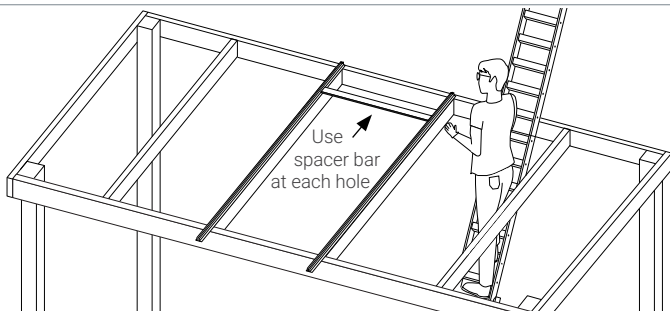


Fasten second inner profile base

 Note: If your rafters or purlins are made of metal instead of wood, use the metal self-drilling screws to attach the profiles.




Be sure that the overhang length is exactly the same for all Profile Bases.

2 - Place the first Roof Panel between the installed Inner Profiles Bases.

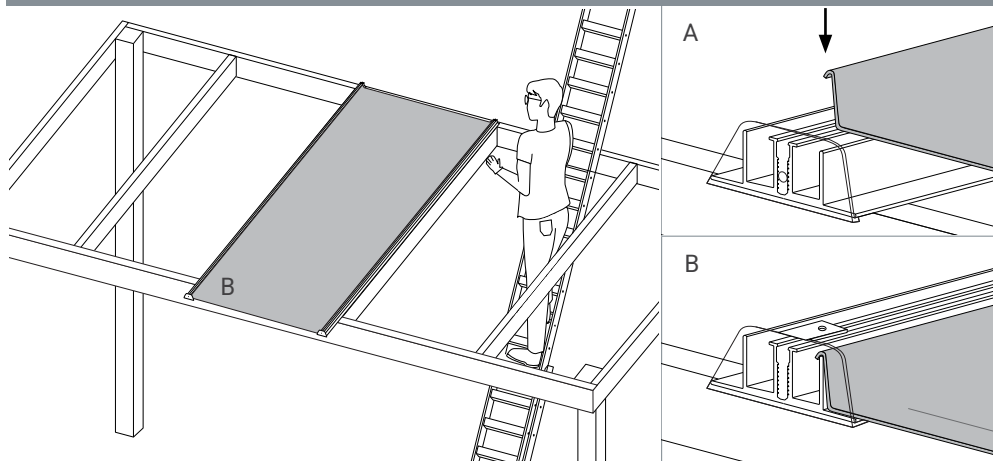

- Make sure the raised edges of the Roof Panel are seated along the length of both Inner Profile Bases.

3 - Add the third Inner Profiles Base.

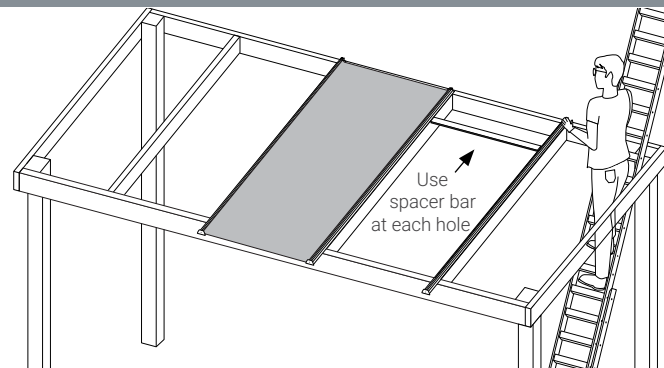


- Using the spacer bar at every hole, fasten screws through the pre-drilled holes along the third Inner Profile Base.


INSTALLATION

4 - Installing Inner Profile Caps

Before fastening, align the Inner Profile Cap with End Closure.

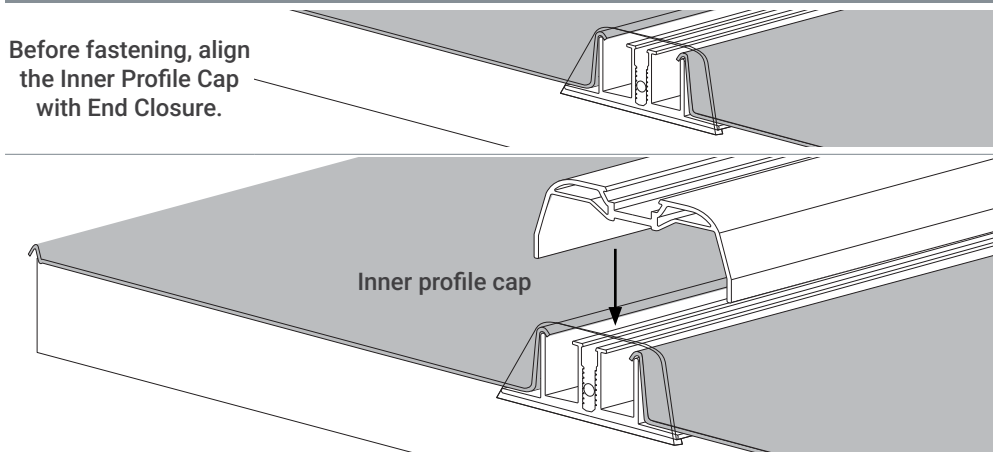


- After two adjacent Roof Panels are in place, install an Inner Profile Cap over the Inner Profile Base between them. This will secure down two adjacent Roof Panel edges.

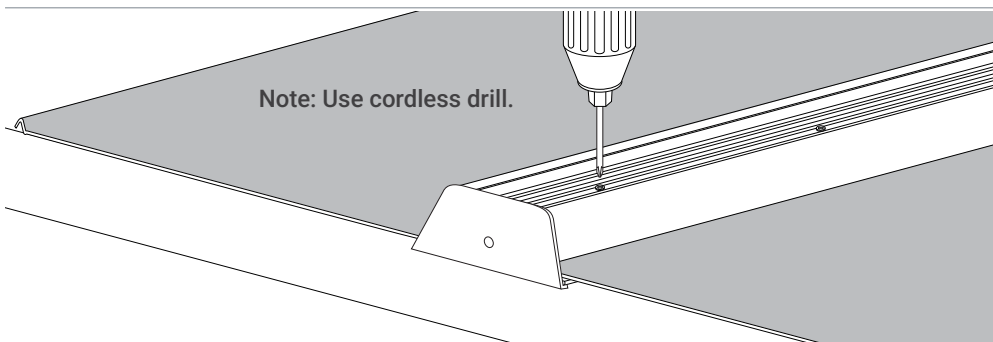


- Fasten The Inner Profile Cap To The Inner Profile Base Using The Locking Screws.
- Start fastening the Inner Profile Cap at the bottom of the roof line, and work toward the top.
- Use adjustable screw gun and avoid overtightening so the screw will not strip the threads out.
- Add another Inner Profile Cap in between every two new panels.

5 - Installing Inner Profile Cap Covers

The inner profile cap must be fully fastened before adding the cap cover. It is very difficult to remove the inner profile cap cover after installation.

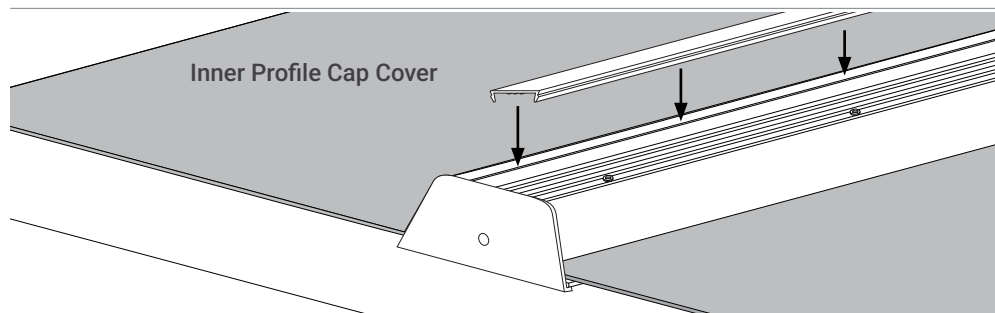

Start at bottom, work toward top.

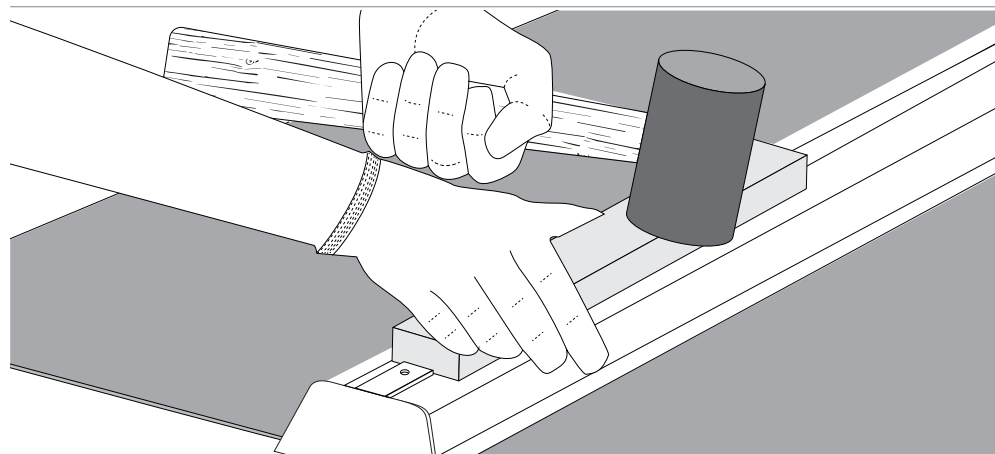


- Install the Inner Profile Cap Cover by GENTLY tapping it into place with a rubber mallet.
- Use a piece of wood to disperse the impact of the mallet and avoid damage to the Profile pieces.
- Start at the bottom of the roof line and work toward the top.
- Remove the protective film after each Roof Panel is fully installed and secured.

INSTALLATION

6 - Measuring Roof Panels for left/right side of roof


If you do not need to rip cut your final two roof panels, skip to step 12.
You will rip cut the final left and right roof panels to fit (if required) before you install the end profile bases. See below.

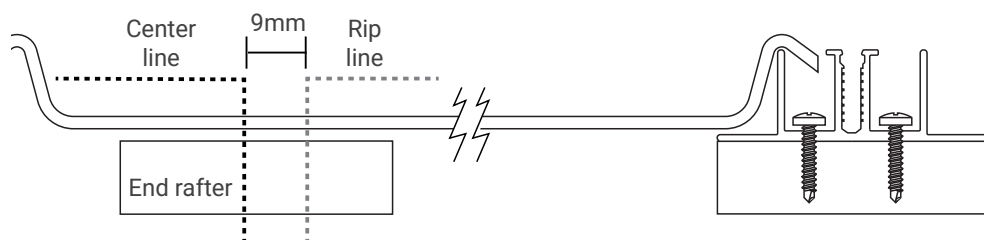

- Set the uncut end Roof Panel in place. On the Roof Panel, note the center line of the end rafter. Then subtract 9mm and mark that as your rip line along the Roof Panel.


On Ground

7 - Cutting Roof Panels for left/right side of roof

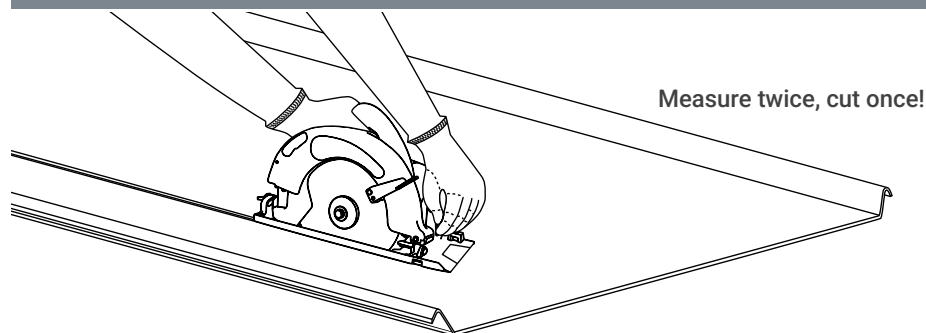


- Bring the sheet to the ground. Cut the Roof Panel along the rip line.

8 - Installing Side Profile Bases with CUT Roof Panels.

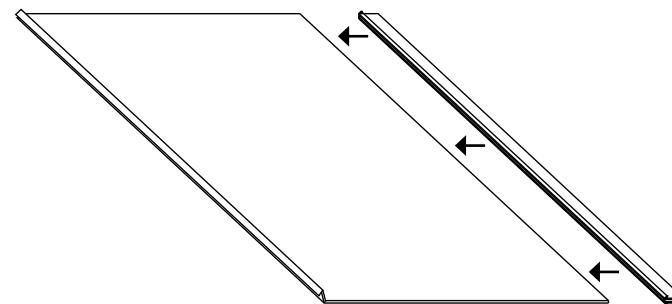

- Cut the Panel Gasket to the length of the Roof Panel.
- Then fit the cut Panel Gasket to the cut edge of the Roof Panel.

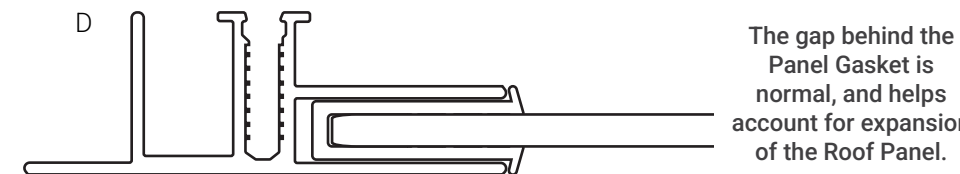


- Still on the ground, insert the rubber Gasket and Roof Panel into the Side Profile Base.
- Gently tap the Side Profile Base with a rubber mallet to fully seat the Panel Gasket.
- Hammer against a length of wood to prevent damage to the Side Profile Base.



INSTALLATION

Back to the Roof

9 - Fixing the side bases on both left and right side Profile Bases.


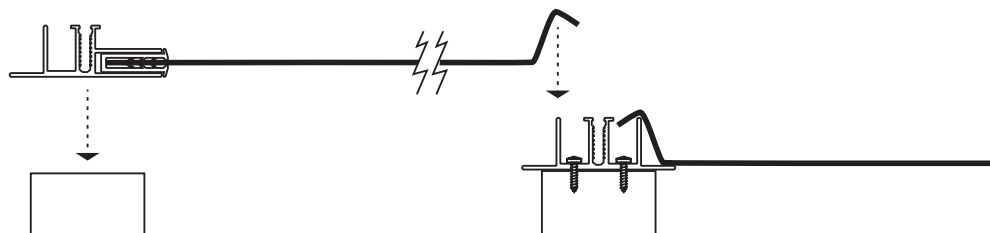


- Bring the entire assembly to the roof and set it in place.

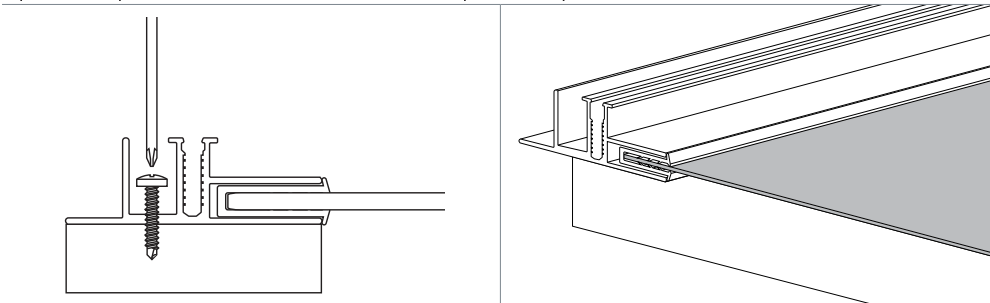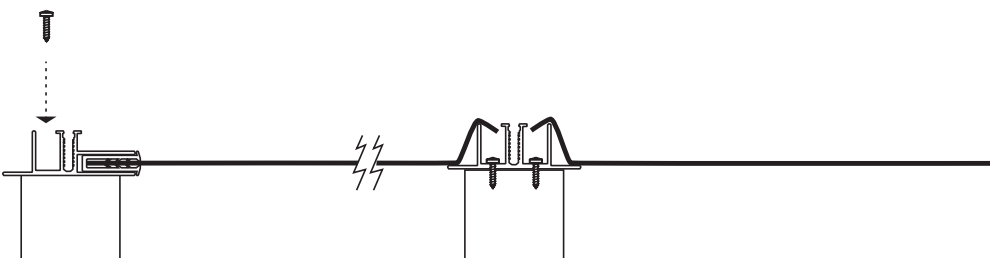

- Fasten the Left and Right Side Profiles Base to the end rafter through the holes along the length.

10 - Install the Side Profile Cap on both left and right side Profile Bases.

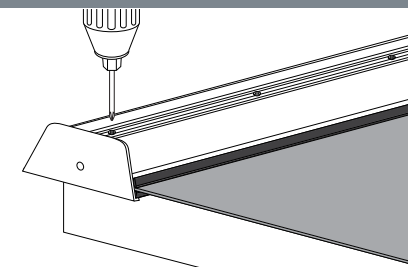
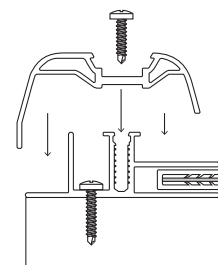


Note: Use cordless drill.

- Start fastening the Side Profile Cap at the bottom of the roof line, and work toward the top.

11 - Install the End Profile Cap Covers on both left and right Side Profile Caps.

The Side profile cap must be fully fastened before adding the cap cover.
It is very difficult to remove the Side profile cap cover after installation.

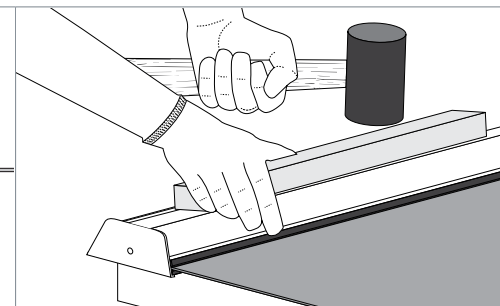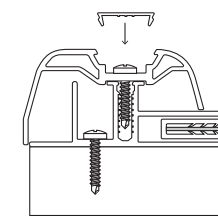

- Install the Side Profile Cap Cover by GENTLY tapping it into place with a rubber mallet.
- Use a piece of wood to disperse the impact of the mallet and avoid damage to the Profile pieces.
- Start at the bottom of the roof line and work toward the top.
- Remove the protective film after each Roof Panel is fully installed and secured.

INSTALLATION


12 - Installing Side Profile Bases with UNCUT Roof Panels.

If you have already installed cut roof panels, skip to step 15.


Sidend profile bases have a different orientation when used with Uncut roof panels.

A. Fasten the first Side Profile Base to the left edge of the roof.

- Be sure the correct edge of the Side Profile Base is facing inward toward the roof.
- Center the profile in the middle of the rafter.
- Using the spacer bar at every hole, fasten screws through the pre-drilled holes along the first Side Profile Base.

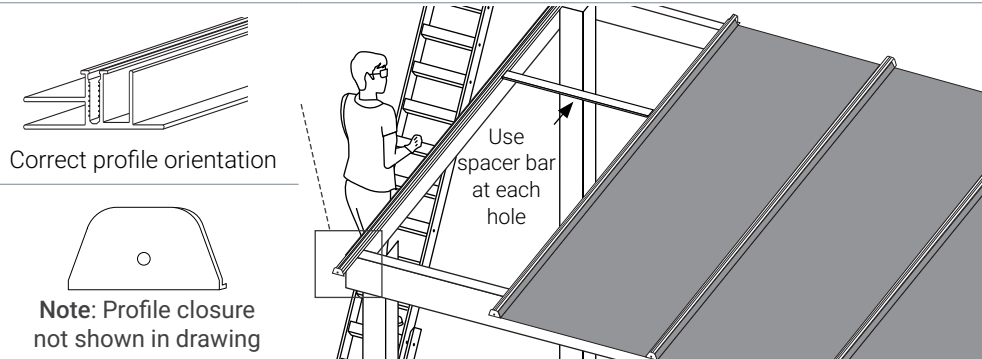


B. Fasten the second Side Profile Base to the right edge of the roof.

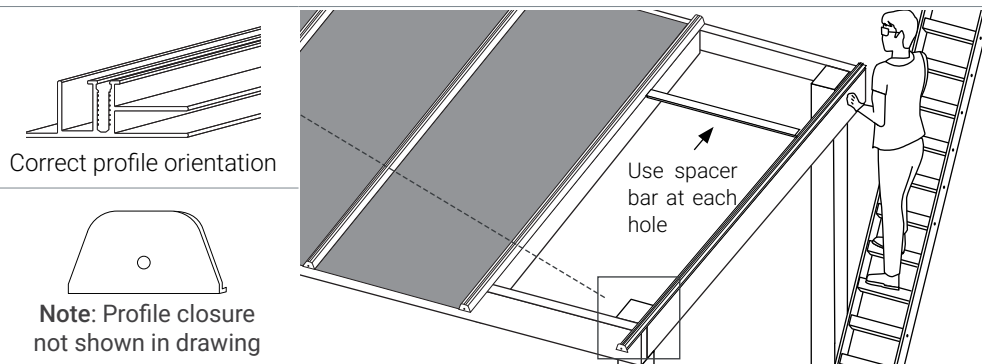


- Start fastening the Side Profile Cap at the bottom of the roof line, and work toward the top.

13 - Installing Left and Right End UNCUT Roof Panels.

THE SIDE PROFILE CAP MUST BE FULLY FASTENED BEFORE ADDING THE CAP COVER.
It is very difficult to remove the End Profile Cap Cover after installation.

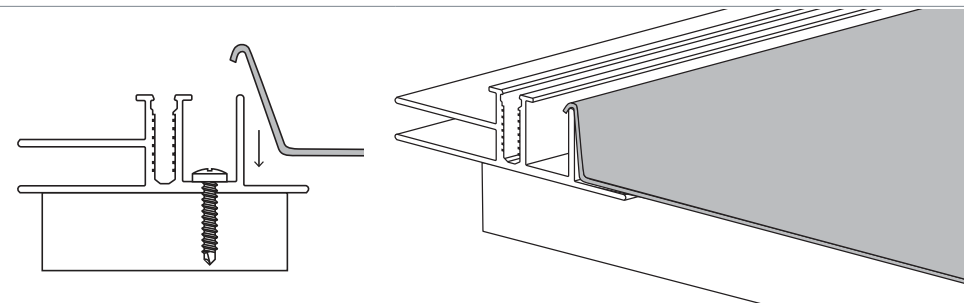


14 - Installing Left and Right Side Profile Caps and Cap Covers.

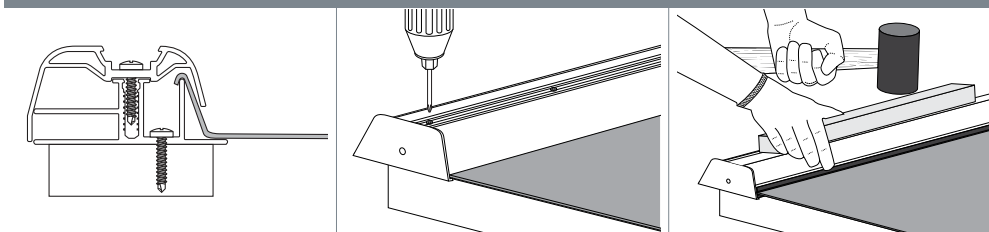


- Install the Side Profile Cap at both sides of the roof.
- Start fastening the Side Profile Cap at the bottom of the roof line, and work toward the top.
- Install the Side Profile Cap Cover by GENTLY tapping it into place with a rubber mallet.
- Use a piece of wood to disperse the impact of the mallet and avoid damage to the Profile pieces. Start at the bottom of the roof line and work toward the top.
- Remove the protective film after each Roof Panel is fully installed and secured.

INSTALLATION - FINISHING


15 - Butyl Tape

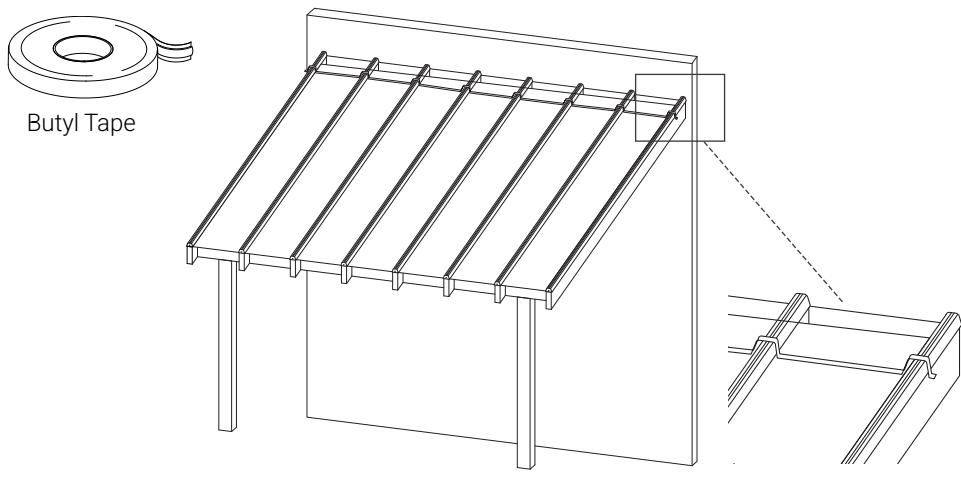

17 - Approved neutral cure silicone (Sold seperately)

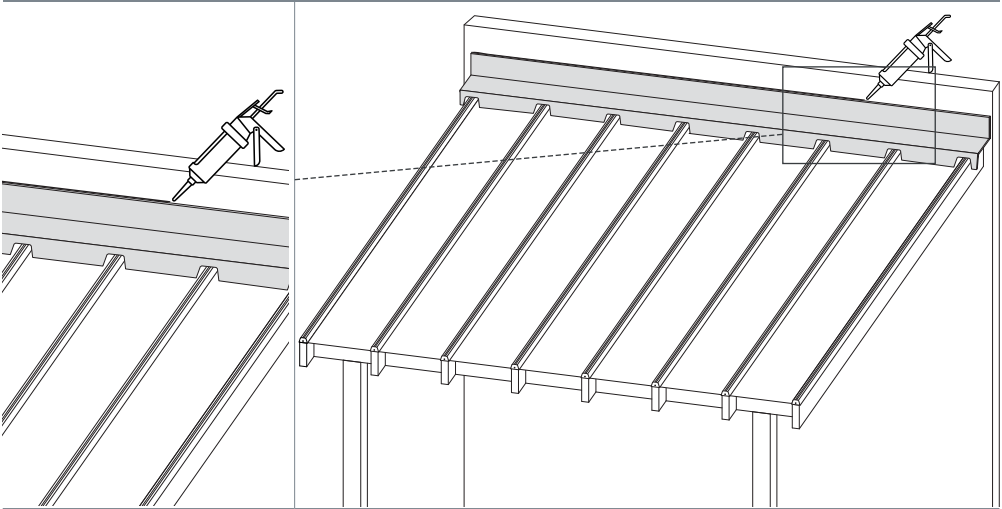

16 - Installing Head Wall Flashing (Sold seperately)

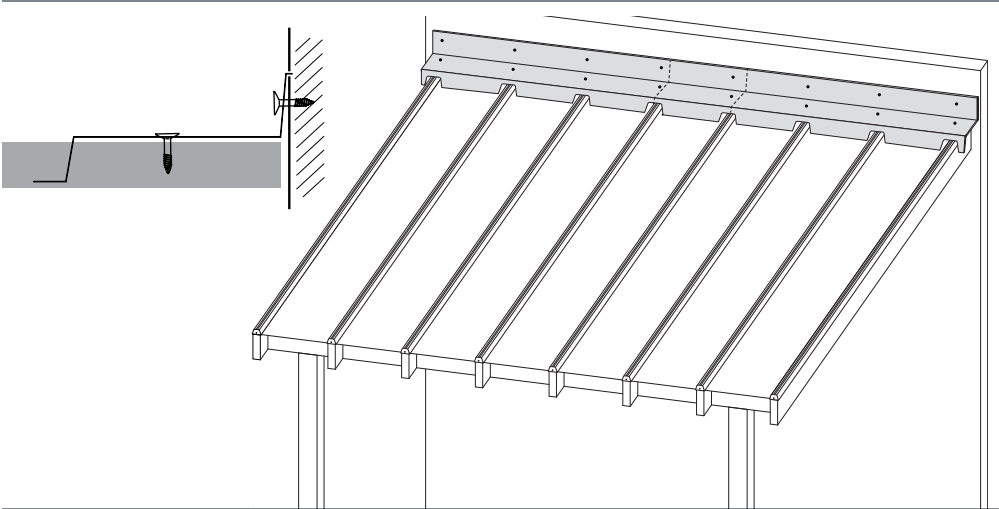

NATSPEC



www.palram.com

In as much as Palram Industries has no control over the use to which others may put the material, it does not guarantee that the same results as those described herein will be obtained. Each user of the material should make his own tests to determine the material's suitability for his own particular use. Statements concerning possible or suggested uses of the materials described herein are not to be construed as constituting a license under any Palram Industries patent covering such use or as recommendations for use of such materials in the infringement of any patent. Palram Industries or its distributors cannot be held responsible for any losses incurred through incorrect installation of the material. In accordance with our company policy of continual product development you are advised to check with your local Palram Industries supplier to ensure that you have obtained the most up to date information.

© 2025 Palram Industries Ltd. | SUNGLAZE® is trademark of Palram Industries Ltd.



EPSE
CERTIFIED EUROPEAN QUALITY



604814 - 08.2026