

EZ Glaze™ | Installation Guide















Easy to install

Rafter installation

Glass appearance

Clear & elegant

UV resistance

Premium solution



EZ Glaze™ - Product page 🗨



Installation video 🗨




PALRAM website 🗨



Before Installation

Recommended safety equipment

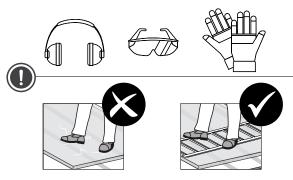


Do not step directly on the sheets between the rafters!

When installing EZ Glaze or doing maintenance work, always use ladders or crawl boards, supported by minimum three roof structural elements.

Required tools

Drill	Ladder	Circular saw	Measuring tape	
		The same of the sa	(5)	

Accessories

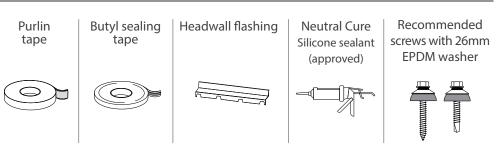


Product information

Thickness	3mm
Cover width	600mm
Total width	673mm
Maximum length	7,000mm
Minimum required pttch	3 degrees


	Profile	Rafter width	Profile dimension	
Profile range	EZ Glaze 50	40-50mm	600mm 22mm	

Installation method

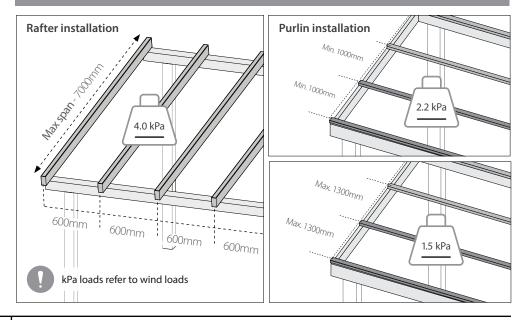



Before Installation

Rafter spacing

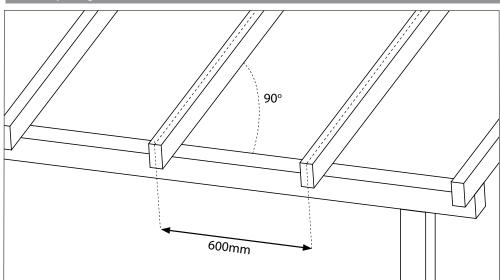



Installation direction recommendation

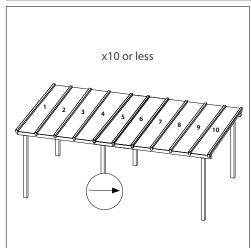

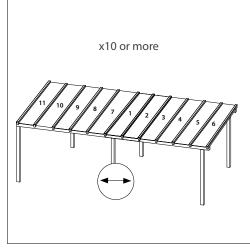


Installation variation and directions

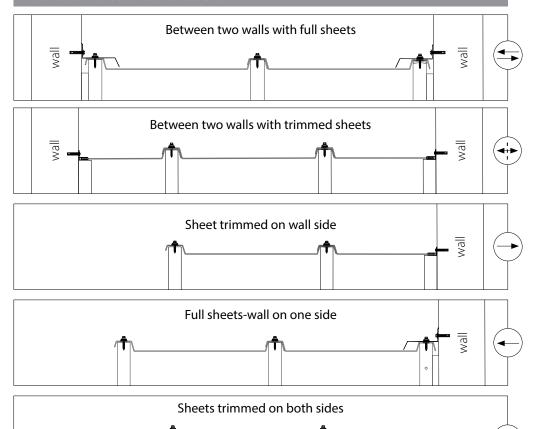

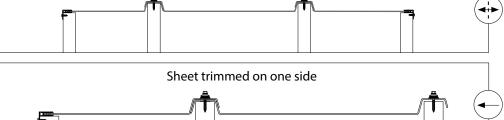


Installation


1 Purlin tape application

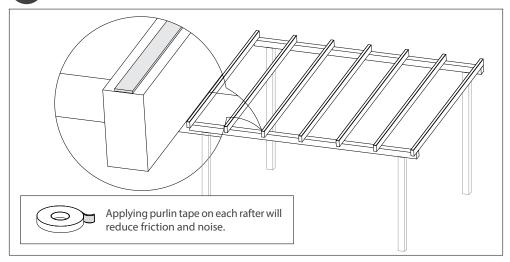


Fixing the first EZ Glaze panel

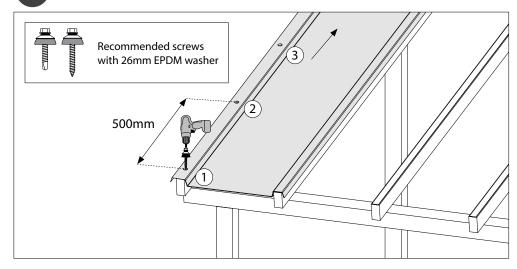

2 Setting the first EZ Glaze panel

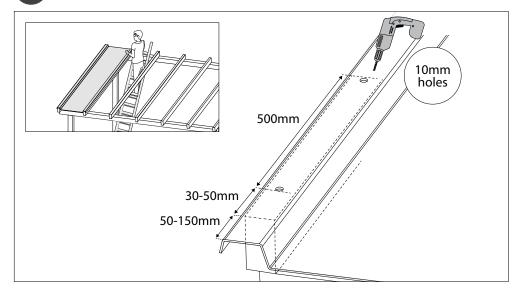


4 Setting the second EZ Glaze panel

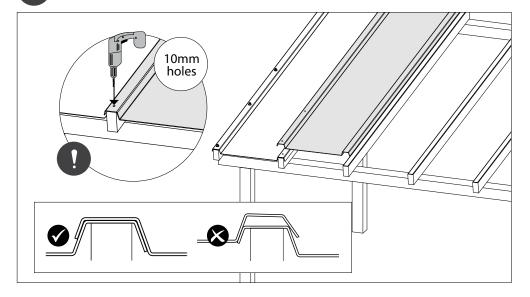


Installation


5 Fixing the second EZ Glaze panel

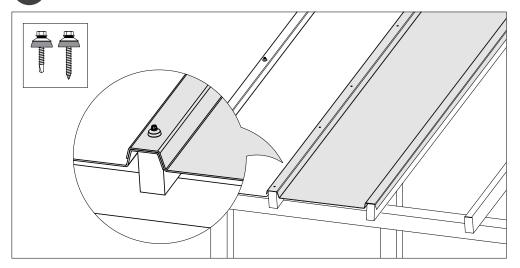


7 Applying butyl tape

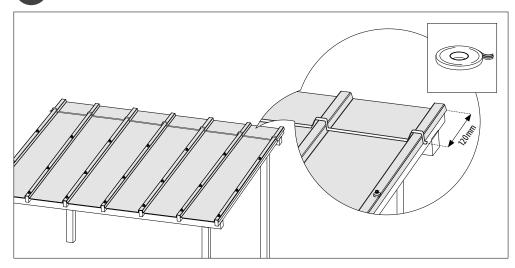

6 Repeat stages 4-5 until the pergola is fully covered

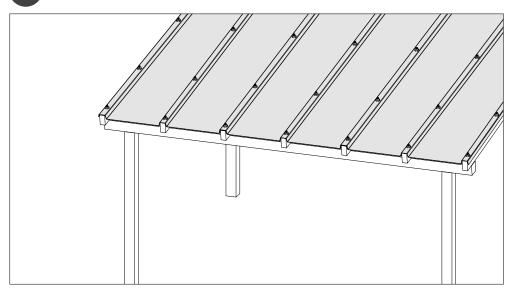


8 Installing head wall flashing (purchased separately)

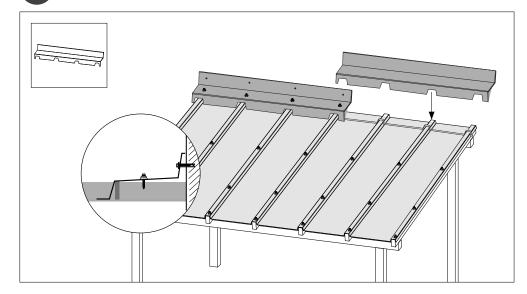

Installation - Finishing Accessories

9


Installing side wall flashing (purchased separately)

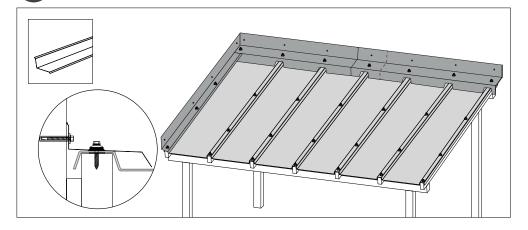


Installation - Finishing




Side wall finish when the panel is trimmed (purchased separately)

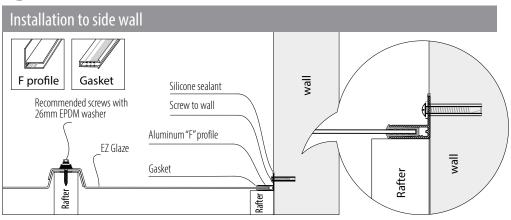

10 Applying silicone (purchased separately)

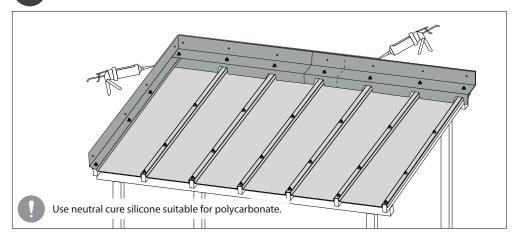

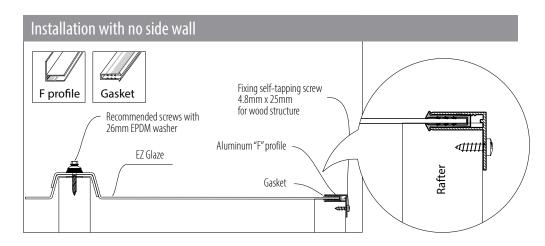







1800 531 727



sales@polyguru.au



www.polyguru.au







